

PLCMDVR72 MANUAL



Please read instructions carefully before installation and use. Installation should be performed by a professional installer. To ensure your safety, the driver should not watch videos or operate features on the monitor while driving. There are no serviceable parts in this unit, do not disassemble or try to repair this unit. If the unit malfunctions please return to your vendor or send to a Pyle repair facility. Please observe and obey the local laws and regulations when installing the unit.

Upon Installation, please make sure as to not to interfere with any of the vehicle's safety features, wiring, components, etc. We are not responsible for any damages, injury, malfunctions or otherwise noted due to faulty or non-professional installation.


wires to assist in the video camera system setup. See the wiring diagram for connections between cameras, monitor and your vehicle.

PLCMDVR72 INTRODUCTION

This model is with one 7 inch quad monitor with RCA jack, and with 2 mini DVR recorder, and with one super slim license plate backup camera.

The 2 mini DVR and backup camera can connect to the 7 inch quad monitor for display. The mini DVR need to insert the TF card(we suggest use class 10 TF card), can be installed one DVR for front view recorder, and the other DVR can be installed for inside of the car recording. The super slim bar style backup camera is for reverse and parking.

Monitor Wiring & Connection

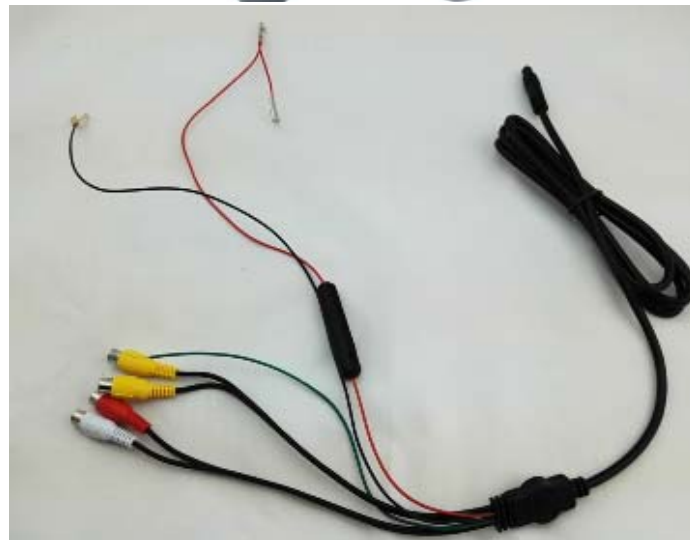

Red and black wire is for 12V power

Green wire is Reverse trigger cable

The 2 yellow RCA jack and red and white RCA jack is the 4 ch video input.

The Reverse trigger cable is for the Ch1, so please connect the reverse backup camera to the Ch1, so when the truck in reverse status, the reverse camera would be priority.


2 pcs Mini DVR connection



there is 2 pcs of this mini DVR included in the package for recording(one may installed at the windscreen for front view driving recording, and one can be installed at inside the car for recording ,or other placed customers want to installed)




The DVR cable red and yellow cable is for 12V power, and black for GND, the yellow video jack is video output, connected with the 7 inch monitor for display.

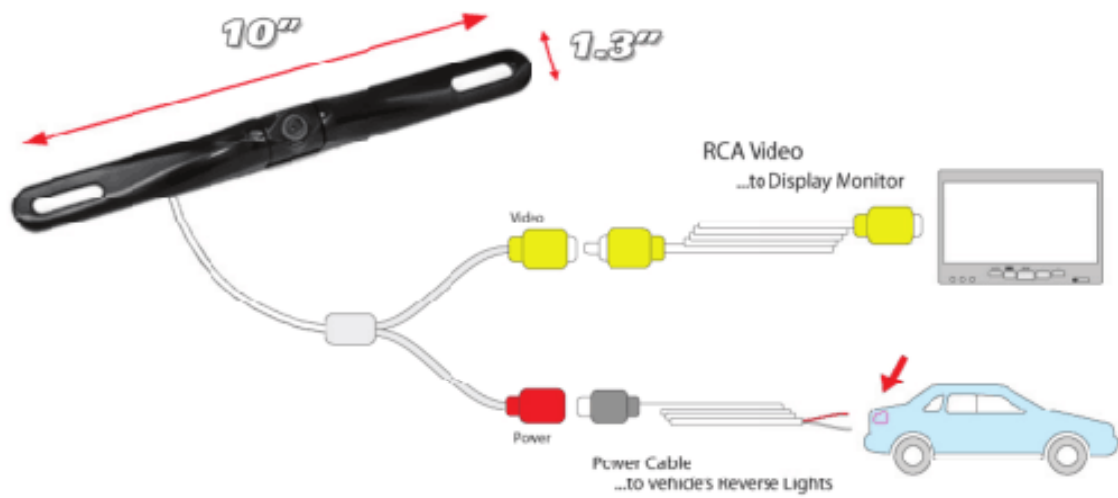Backup camera connection:



Monitor Buttons:




1. V1/V2: change the mode, 1 ch, 2ch,3ch,4ch display
2.  This button for reverse the picture image left and right
3. Menu: Adjust the color, brightness, etc.
4. Power button
5.   Increase/Decrease

Remote Control



Monitor Stand Mounting

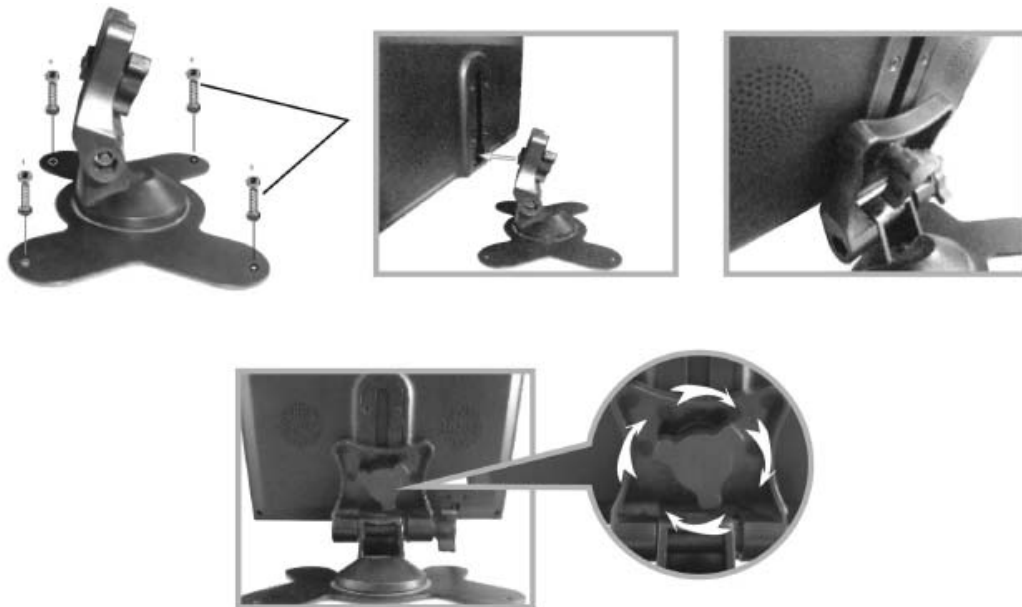

1. Set the mount stand in the desired location, then use screws to secure the mount stand into location. Please make sure to set a location free from vehicle obstruction including any wiring, or location where it may obstruct the driver's view, driving conditions, etc.
2. Attach the metal buckle piece on top of the fan shaped mount stand,

and slide it into the receiving slot in back of the display monitor assembly.

This metal buckle should slide in and up to the monitor assembly.

3. Set the desired position/height of the buckle into the monitor assembly.

4. Tighten the clamp-style knob in the back of the stand mount to secure the monitor in the desired position.

5. The angle / tilt position of the stand mount is also adjustable. Located toward the base of the stand mount is another clamp-style knob.